

531.381



P884e

AD232491

NTIS


One Source. One Search. One Solution.

AN ELEMENTARY DISCUSSION OF DEFINITIONS OF STRESS RATE

BROWN UNIV PROVIDENCE R I

FEB 1960


UNIVERSITY OF ILLINOIS
LIBRARY
AT URBANA - CHAMPAIGN
ENGINEERING

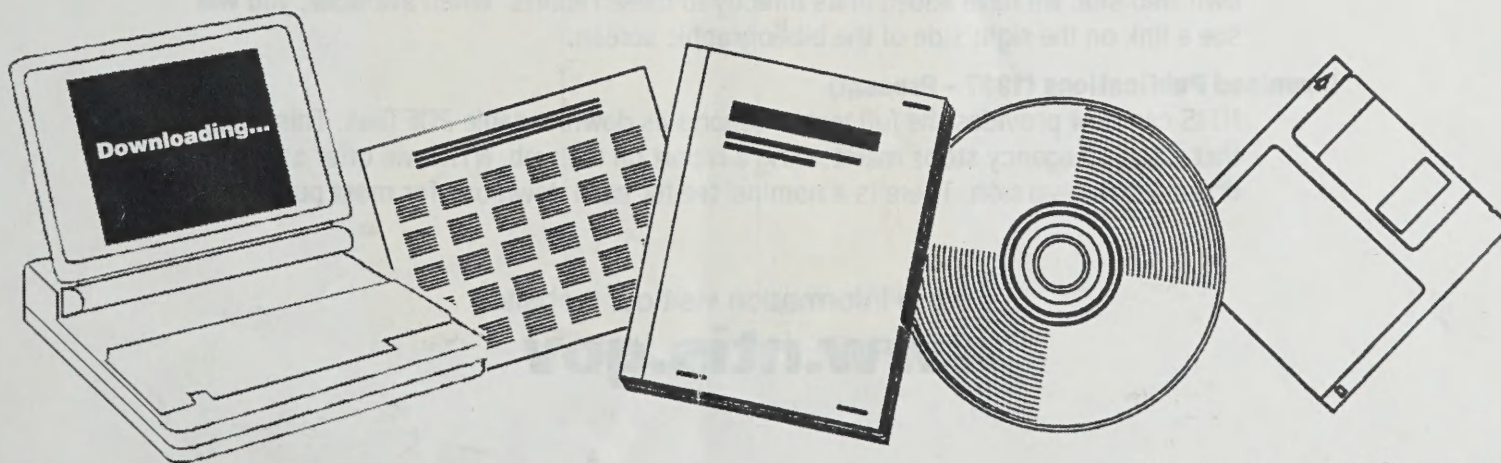

U.S. Department of Commerce
National Technical Information Service


One Source. One Search. One Solution.

NTIS

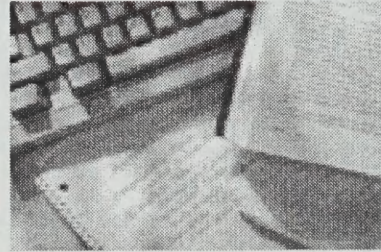

Providing Permanent, Easy Access to U.S. Government Information

National Technical Information Service is the nation's largest repository and disseminator of government-initiated scientific, technical, engineering, and related business information. The NTIS collection includes almost 3,000,000 information products in a variety of formats: electronic download, online access, CD-ROM, magnetic tape, diskette, multimedia, microfiche and paper.

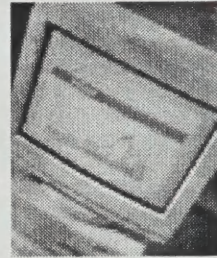

Search the NTIS Database from 1990 forward

NTIS has upgraded its bibliographic database system and has made all entries since 1990 searchable on **www.ntis.gov**. You now have access to information on more than 600,000 government research information products from this web site.

Link to Full Text Documents at Government Web Sites

Because many Government agencies have their most recent reports available on their own web site, we have added links directly to these reports. When available, you will see a link on the right side of the bibliographic screen.

Download Publications (1997 - Present)

NTIS can now provides the full text of reports as downloadable PDF files. This means that when an agency stops maintaining a report on the web, NTIS will offer a downloadable version. There is a nominal fee for each download for most publications.

For more information visit our website:

www.ntis.gov



U.S. DEPARTMENT OF COMMERCE
Technology Administration
National Technical Information Service
Springfield, VA 22161

531.381

P884e

RECEIVED

JUN 07 2005

GRAINGER LIBRARY

NOTICE: Return or renew all Library Materials! The *Minimum Fee* for each Lost Book is \$50.00.

The person charging this material is responsible for its return to the library from which it was withdrawn on or before the **Latest Date** stamped below.

Theft, mutilation, and underlining of books are reasons for disciplinary action and may result in dismissal from the University.
To renew call Telephone Center, 333-8400

UNIVERSITY OF ILLINOIS LIBRARY AT URBANA-CHAMPAIGN

D
E
ND
PON

ENGINEERING

L161—O-1096


One Source. One Search. One Solution.

NTIS



Providing Permanent, Easy Access to U.S. Government Information

National Technical Information Service is the nation's largest repository and disseminator of government-initiated scientific, technical, engineering, and related business information. The NTIS collection includes almost 3,000,000 information products in a variety of formats: electronic download, online access, CD-ROM, magnetic tape, diskette, multimedia, microfiche and paper.

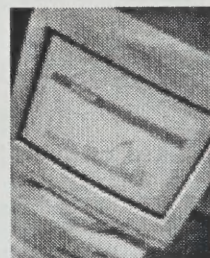

Search the NTIS Database from 1990 forward

NTIS has upgraded its bibliographic database system and has made all entries since 1990 searchable on **www.ntis.gov**. You now have access to information on more than 600,000 government research information products from this web site.

Link to Full Text Documents at Government Web Sites

Because many Government agencies have their most recent reports available on their own web site, we have added links directly to these reports. When available, you will see a link on the right side of the bibliographic screen.

Download Publications (1997 - Present)

NTIS can now provide the full text of reports as downloadable PDF files. This means that when an agency stops maintaining a report on the web, NTIS will offer a downloadable version. There is a nominal fee for each download for most publications.

For more information visit our website:

www.ntis.gov



U.S. DEPARTMENT OF COMMERCE
Technology Administration
National Technical Information Service
Springfield, VA 22161

531.3
P884

ENGINEERING

RECEIVED

JUN 07 2005

GRAINGER LIBRARY

THIS REPORT HAS BEEN DELIMITED
AND CLEARED FOR PUBLIC RELEASE
UNDER DOD DIRECTIVE 5200.20 AND
NO RESTRICTIONS ARE IMPOSED UPON
ITS USE AND DISCLOSURE.

DISTRIBUTION STATEMENT A

APPROVED FOR PUBLIC RELEASE;
DISTRIBUTION UNLIMITED.

232 491

OFFICE OF NAVAL RESEARCH

Contract Nonr-562(10)

NR-064-406

Technical Report No. 53

AN ELEMENTARY DISCUSSION OF DEFINITIONS OF STRESS RATE

by

William Prager

DIVISION OF APPLIED MATHEMATICS

BROWN UNIVERSITY

PROVIDENCE, R. I.

February 1960

THIS REPORT IS UNCLASSIFIED

DATE

BY

DATE

Reproduction in whole or in part is permitted for
any purpose of the United States Government.

C11-53

Foreword

A condensed version of this paper was presented at the First All-Union Congress of Applied Mechanics in Moscow (Jan. 27 - Feb. 3, 1960). Since it is uncertain that Proceedings of this Congress will be published, the paper is issued as a Technical Report under Contract Nonr-562(10) on account of its possible interest to workers in the contract field.

W. Prager

AN ELEMENTARY DISCUSSION OF DEFINITIONS OF STRESS RATE

by

William Prager (Brown University, Providence, R.I., U.S.A.)

1. Introduction. The simplest constitutive equation considered in the theory of plasticity only involves the tensors of stress and rate of deformation and describes rigid, perfectly plastic behavior. When elastic effects are to be included in the analysis, this equation is assumed to apply to the plastic part of the rate of deformation, to which an elastic part must be added before the total rate of deformation is obtained. In a similar manner, a simple constitutive equation for a viscoelastic material can be established by adding an elastic rate of deformation to the rate of deformation of a viscous fluid. In both cases the elastic rate of deformation is usually written as a function of an appropriately defined rate of stress.

This stress rate must obviously satisfy the following condition: if a stressed continuum performs a rigid body motion and the stress field is independent of time when referred to a coordinate system that participates in this motion, the stress rate vanishes identically. As is readily seen, this restriction is not severe enough to lead to a unique definition of stress rate. Indeed, from one definition that satisfies this condition another one may be obtained by adding terms that contain the rate of deformation. In a rigid body motion, these terms vanish, and the second definition reduces to the first. Since the condition imposed on the definition of stress rate only concerns rigid body motions, it will be satisfied by the second definition if it

is satisfied by the first. As a consequence of this freedom of choice, many definitions of stress rate are found in the literature.

A similarly embarrassing choice offers itself when one attempts to define finite strain. Potentially, any tensor formed from the displacement gradients qualifies as strain tensor if it vanishes identically for all rigid body motions. Depending on the field of application, one or the other definition of strain may be more convenient to use. Whereas the relative merits of the various definitions of strain are well understood, those of the various definitions of stress rate have not been discussed in similar detail. Moreover, some of these definitions are usually presented in a manner that presupposes familiarity with general tensor calculus. In this paper, only Cartesian tensors are used; the principal definitions of stress rate found in the literature are derived in an intuitive manner, and their suitability for the mathematical description of elastic, plastic behavior is discussed.

2. Notations and basic relations. Let t denote the time and x_i ($i = 1, 2, 3$) a fixed system of rectangular Cartesian coordinates, and denote partial differentiation with respect to these independent variables by the operators ∂_0 and ∂_i , respectively.

A tensor of the second order, T_{ij} , can be written as the sum of its symmetric and antisymmetric parts, which will be denoted as follows:

$$T_{(ij)} = \frac{1}{2}(T_{ij} + T_{ji}), \quad (1)$$

$$T_{[ij]} = \frac{1}{2}(T_{ij} - T_{ji}) .$$

If $v_i(x_1, x_2, x_3, t)$ is the time-dependent velocity field of a continuum, the rate of deformation is defined as the symmetric part $\partial_{(i} v_{j)}$ of the tensor $\partial_i v_j$, and the rate of rotation as its antisymmetric part $\partial_{[i} v_{j]}$.

The acceleration of a typical particle is the material derivative v_i^* of its velocity, which is defined by

$$v_i^* = \partial_0 v_i + v_j \partial_j v_i , \quad (2)$$

where the repeated subscript indicates summation in the usual manner. The material derivative of the infinitesimal vector ds_i joining adjacent particles is

$$(ds_i)^* = \partial_j v_i ds_j . \quad (3)$$

Because it will suggest a possible definition of stress rate by analogy, we consider the second rate of deformation. If ds_i and δs_i are the infinitesimal vectors joining the typical particle to two neighboring particles, it follows readily from (3) that the material derivative of their scalar product is

$$(ds_i \delta s_i)^* = 2\partial_{(i} v_{j)} ds_i \delta s_j . \quad (4)$$

Forming the material derivative of (4), we obtain, after some simplifications,

$$(ds_i \delta s_i)^{\bullet\bullet} = 2[(\partial_i v_j)^{\bullet} + \partial_i v_k \partial(k v_j) + \partial_j v_k \partial(k v_i)] ds_i \delta s_j. \quad (5)$$

Since the coefficient of $2ds_i \delta s_j$ in (4) is called the rate of deformation, the corresponding coefficient in (5), i.e. the contents of the bracket, may well be called the second rate of deformation. Higher rates of deformation have been discussed by Rivlin and Ericksen [1]*.

The oriented surface element formed by the infinitesimal vectors ds_i and δs_i is defined as

$$dA_i = \epsilon_{ijk} ds_j \delta s_k, \quad (6)$$

where ϵ_{ijk} is the alternating tensor. It is readily verified by means of (3), that the material derivative of this surface element can be written as

$$(dA_i)^{\bullet} = \partial_j v_j dA_i - \partial_i v_j dA_j \quad (7)$$

(see, for instance, [2, p. 598]).

3. Jaumann's definition. If $\sigma_{ij}(x_1, x_2, x_3, t)$ denotes the time-dependent stress field in the continuum, the material derivative

$$\sigma_{ij}^{\bullet} = \partial_0 \sigma_{ij} + v_k \partial_k \sigma_{ij} \quad (8)$$

indicates the time rate of change of a typical stress component at a particle of the continuum, the stress tensor being referred to the fixed coordinate system.

* Numbers in brackets refer to the Bibliography at the end of the paper.

When the continuum and its stress field perform a rigid body motion other than a mere translation, σ_{ij}^* does not vanish identically. Accordingly, (8) is not acceptable as a definition of the stress rate for use in constitutive equations. A suitable definition is obtained as follows.

Let P, Q_1, Q_2, Q_3 be neighboring particles such that the lines PQ_α ($\alpha=1,2,3$) indicate a system of principal axes of the rate of deformation at the particle P and the time t , and denote the positions of these particles at the time $t+dt$ by P', Q'_1, Q'_2, Q'_3 . As the shear rates for the principal axes of the rate of deformation vanish, the lines $P'Q'_\alpha$ are orthogonal. The stress rate could be so defined that it vanishes if the stress tensor at P has the same components with respect to the axes PQ_α at the time t as the stress tensor at P' has with respect to the axes $P'Q'_\alpha$ at the time $t+dt$.

Let λ_j^α be the unit vector of the direction PQ_α and $\lambda_j^\alpha + (\lambda_j^\alpha)^* dt$ that of the direction $P'Q'_\alpha$. Since the axes PQ_α have the rate of rotation $\partial_{[i} v_{j]}$, we have

$$(\lambda_i^\alpha)^* = \partial_{[j} v_{i]} \lambda_j^\alpha. \quad (9)$$

Now, a typical component of the stress tensor σ_{ij} with respect to the axes PQ_α is given by the expression $\sigma_{ij} \lambda_i^\alpha \lambda_j^\beta$. According to (9), the material derivative of this expression is

$$(\sigma_{ij} \lambda_i^\alpha \lambda_j^\beta)^* = (\sigma_{ij}^* + \sigma_{kj} \partial_{[i} v_{k]} + \sigma_{ik} \partial_{[j} v_{k]}) \lambda_i^\alpha \lambda_j^\beta. \quad (10)$$

If the material derivatives of all these stress components are to vanish, the parenthesis in (10) must vanish. The expression in the parenthesis thus constitutes a suitable definition of stress rate. On account of the symmetry of the stress tensor and the antisymmetry of the rate of rotation tensor, this definition, which is due to Jaumann [3], may be written as

$$\dot{\sigma}_{ij}^J = \dot{\sigma}_{ij} - \sigma_{ik} \dot{\theta} [k^v_j] - \sigma_{jk} \dot{\theta} [k^v_i] . \quad (11)$$

Jaumann's work does not seem to be well known: the definition (11) is frequently used in the recent literature [4] without reference to Jaumann.

Since Jaumann's stress rate $\dot{\sigma}_{ij}^J$ measures the rate of change of the stress components with respect to a rectangular Cartesian system that participates in the rotation of the material, $\dot{\sigma}_{ij}^J = 0$ implies that the invariants of the stress tensor are stationary.

4. The definition of Cotter and Rivlin. Let ℓ_i^α ($\alpha=1,2,3$) be three linearly independent vectors emanating from the typical particle P at the time t. During the time interval (t, t+dt), the neighborhood of P undergoes the infinitesimal affine transformation specified by tensor $\partial_i v_j$. If the vectors ℓ_i^α are subjected to the same transformation, we have, in analogy to (3),

$$(\ell_i^\alpha)^\bullet = \partial_j v_i \ell_j^\alpha . \quad (12)$$

When the continuum and its stress field perform a rigid body motion, the material derivative

$$(\sigma_{ij} \ell_i^\alpha \ell_j^\beta)^\bullet = (\sigma_{ij} + \sigma_{kj} \partial_i v_k + \sigma_{ik} \partial_j v_k) \ell_i^\alpha \ell_j^\beta \quad (13)$$

vanishes. In view of the symmetry of the stress tensor, this remark yields the following definition of stress rate, which is due to Cotter and Rivlin [5]:

$$\sigma_{ij}'' = \sigma_{ij}^* + \partial_i v_k \sigma_{kj} + \partial_j v_k \sigma_{ki} . \quad (14)$$

Note that the right-hand side of (14) has the same structure as the expression in the bracket in (5) which can be written as

$$(\partial(i v_j))'' = (\partial(i v_j))^* + \partial_i v_k \partial(k v_j) + \partial_j v_k \partial(k v_i) . \quad (15)$$

Cotter and Rivlin [5] have shown how higher rates of stress can be obtained by a continuation of the procedure that led to (14). While the definition (14) lends itself more readily to this generalization than the definition (11), it has the drawback that $\sigma_{ij}'' = 0$ does not imply stationary behavior of the stress invariants.

5. Oldroyd's definition. Let the stress tensor at the particle P and the time t be written as a linear combination of the dyadic products of the vectors ℓ_i^α :

$$\sigma_{ij} = c_{\alpha\beta} \ell_i^\alpha \ell_j^\beta . \quad (16)$$

On account of (12), the coefficients $c_{\alpha\beta}$ of this combination will be stationary if

$$\begin{aligned} c_{ij}^* &= s_{\alpha\beta} \partial_k v_i \ell_k^\alpha \ell_j^\beta + s_{\alpha\beta} \partial_k v_j \ell_i^\alpha \ell_k^\beta \\ &= \sigma_{kj} \partial_k v_i + \sigma_{ik} \partial_k v_j \end{aligned} \quad (17)$$

In view of the symmetry of the stress tensor, it follows from this remark that

$$\sigma_{ij}^{\prime\prime} = \dot{\sigma}_{ij} - \sigma_{ik} \partial_k v_j - \sigma_{jk} \partial_k v_i \quad (18)$$

is an acceptable definition of stress rate.

This definition, which is due to Oldroyd [6], has the same disadvantage as that of Cotter and Rivlin: the stress invariants need not be stationary if $\sigma_{ij}^{\prime\prime}$ vanishes.

6. Truesdell's definition. The infinitesimal force transmitted across the oriented surface element dA_i is

$$dP_j = \sigma_{ij} dA_i. \quad (19)$$

Let this force be written as a linear combination of the vectors ℓ_i^α :

$$dP_j = dC_\alpha \ell_j^\alpha. \quad (20)$$

According to (12), the coefficients dC_α of this combination will be stationary if

$$(dP_j)^\bullet = dC_\alpha \partial_k v_j \ell_k^\alpha = dP_k \partial_k v_j. \quad (21)$$

Substitution of (20) into (21) and use of (7) furnishes $\sigma_{ij}^{\prime\prime\prime} dA_i = 0$, where

$$\sigma_{ij}^{\prime\prime\prime} = \dot{\sigma}_{ij} + \sigma_{ij} \partial_k v_k - \sigma_{ik} \partial_k v_j - \sigma_{jk} \partial_k v_i. \quad (22)$$

As follows from its derivation, equation (22) represents an acceptable definition of stress rate.

This definition, which is due to Truesdell [2, p. 604], may seem more far-fetched than the preceding ones, because it is based on the consideration of elementary forces rather than stresses. It can be shown, however, that Truesdell's stress rate is the partial derivative of Kirchhoff's stress tensor with respect to time, the other independent variables being the rectangular Cartesian coordinates of the particles in some reference state (see [7], Chapter IX, Sect. 4). Note that the vanishing of Truesdell's stress rate does not imply stationary behavior of the stress invariants.

7. Use in constitutive equations of plasticity. In the theory of perfectly plastic solids, a state of stress is said to be at or below the yield limit according to whether a certain function of the stress invariants, the yield function, is zero or negative. States of stress that furnish positive values of the yield function cannot be supported by these solids.

The constitutive equations describing elastic, perfectly plastic behavior are generally conceived as resulting from the superposition of the rates of deformation of an elastic and a rigid, perfectly plastic constituent. To facilitate this superposition, the constitutive equation of the first constituent is usually assumed to establish a one-to-one correspondence between the rate of deformation and the stress rate. The second constituent is supposed to be rigid under stresses below the yield limit, and to flow plastically under stresses at the yield limit.

In the composite elastic, perfectly plastic solid two criteria are therefore used to judge a given variation of stress

in time: the stress rate in the elastic constituent, and the rate of change of the yield function in the plastic constituent. To avoid contradictions, the yield function should be stationary when the stress rate vanishes. A similar condition arises in the theory of elastic, work-hardening solids, where a vanishing stress rate should go with a stationary state of hardening. Only Jaumann's definition of stress rate satisfies these conditions. For use in the constitutive equations of plasticity, Jaumann's definition is therefore preferable to the other definitions of stress rate discussed in this paper.

BIBLIOGRAPHY

1. R. S. Rivlin and J. L. Ericksen, J. Rat. Mech. Analysis 4 (1955) 323.
2. C. Truesdell, J. Rat. Mech. Analysis 2 (1953) 593.
3. G. Jaumann, Grundlagen der Bewegungslehre, Leipzig, 1905; see also Sitzber. Akad. Wiss. Wien (IIa) 120 (1911) 385.
4. H. Fromm, Ingenieurarchiv 4 (1933) 452; S. Zaremba, Mémoires Sci. Math. No. 82, Paris, 1937; W. Noll, J. Rat. Mech. Analysis 4 (1955) 3; R. Hill, J. Mech. Phys. Solids 7 (1959) 209.
5. B. A. Cotter and R. S. Rivlin, Q. Appl. Math. 13 (1955) 177.
6. J. G. Oldroyd, Proc. Roy. Soc. (A) 200 (1950) 523.
7. W. Prager, Einführung in die Kontinuumsmechanik, Basel, 1960.

SATISFACTION GUARANTEED

NTIS strives to provide quality products, reliable service, and fast delivery. Please contact us for a replacement within 30 days if the item you receive is defective or if we have made an error in filling your order.

▲ **E-mail: info@ntis.gov**

▲ **Phone: 1-888-584-8332 or (703)605-6050**

Reproduced by NTIS

National Technical Information Service
Springfield, VA 22161

***This report was printed specifically for your order
from nearly 3 million titles available in our collection.***

For economy and efficiency, NTIS does not maintain stock of its vast collection of technical reports. Rather, most documents are custom reproduced for each order. Documents that are not in electronic format are reproduced from master archival copies and are the best possible reproductions available.

Occasionally, older master materials may reproduce portions of documents that are not fully legible. If you have questions concerning this document or any order you have placed with NTIS, please call our Customer Service Department at (703) 605-6050.

About NTIS

NTIS collects scientific, technical, engineering, and related business information – then organizes, maintains, and disseminates that information in a variety of formats – including electronic download, online access, CD-ROM, magnetic tape, diskette, multimedia, microfiche and paper.

The NTIS collection of nearly 3 million titles includes reports describing research conducted or sponsored by federal agencies and their contractors; statistical and business information; U.S. military publications; multimedia training products; computer software and electronic databases developed by federal agencies; and technical reports prepared by research organizations worldwide.

For more information about NTIS, visit our Web site at
<http://www.ntis.gov>.

NTIS

**Ensuring Permanent, Easy Access to
U.S. Government Information Assets**

UNIVERSITY OF ILLINOIS-URBANA



3 0112 067106952



U.S. DEPARTMENT OF COMMERCE
Technology Administration
National Technical Information Service
Springfield, VA 22161 (703) 605-6000